



 
Tipmatic Plus Click-on - Quick and easy fitting

1. Remove the hinge arm cover plate (where applicable)
2. Insert tipmatic Plus Click-on with the two small hooks underneath into the recesses in the hinge cup at a slight angle
3. Push down both sides of the adapter simultaneously until it engages with an audible 'click'.
4. With the flatter side facing downwards, push the Tipmatic ejector fully into the adapter opening
5. Adjust front gap, put on hinge arm cover cap (where applicable)



Tipmatic Plus 170° - Quick and easy fitting

1. With the flatter side facing downwards, push the Tipmatic Plus ejector into the adaptor opening




2. Insert the adaptor with the two small hooks underneath into the recesses in the hinge arm, at a slight angle

3. Push down the Tipmatic Plus 170° adaptor until it engages with an audible 'click'




A Tipmatic® set for click on hinges

 - Can be retrospectively fitted
- Only for use with unsprung hinges
- Consists of:
 1x Tipmatic® CS holder, 1x Tipmatic®
 1x Counter part, 1x Magnetic pin



	Cat. No.
Tipmatic set for click on hinges	322.65.000

 Order qty: 1 set

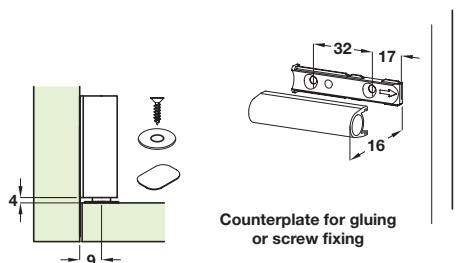

Counterplate for gluing or screw fixing

C Tipmatic® CS straight adaptor

- For magnetic pin
- Not for use with door buffers
- Plastic




Finish	Cat. No.
Grey	322.65.012

Order qty: 1 pc


B Tipmatic® set for 170° click on hinges

 - Can be retrospectively fitted
- Only for use with unsprung hinges
- Consists of:
 1x Tipmatic® CS holder, 1x Tipmatic®
 1x Counter part, 1x Magnetic pin



	Cat. No.
Tipmatic set for 170° click on hinges	322.65.020

 Order qty: 1 set

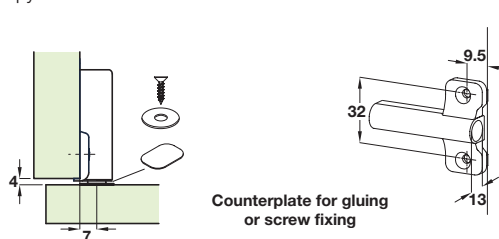

Counterplate for gluing or screw fixing

D Tipmatic® CS frame adapter

- For magnetic pin
- Not for use with door buffers
- Plastic



Finish	Cat. No.
Grey	322.65.013

Order qty: 1 pc

TCH-FF 2010, HUK. Dimensional data not binding. We reserve the right to alter specifications without notice.