
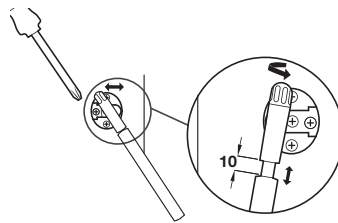
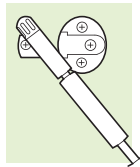


Lid Stays

Drop Down Lid Stay and Adaptor


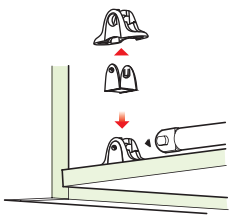


Important:
The door bracket has to be placed in vertical position with the slot facing forwards.

The side bracket has to be placed with the slot in a horizontal position and the open end facing the wall.

The opening and closing of the door can be changed by adjusting the position of the piston base plate within the slot:
- Forwards adjustment = the door opens automatically later.
- Backwards adjustment = the door opens automatically in advance

HINGE IN USE	X°
FLAP HINGE	90° max 80° min
STANDARD SPRUNG HINGE	94° max 83° min

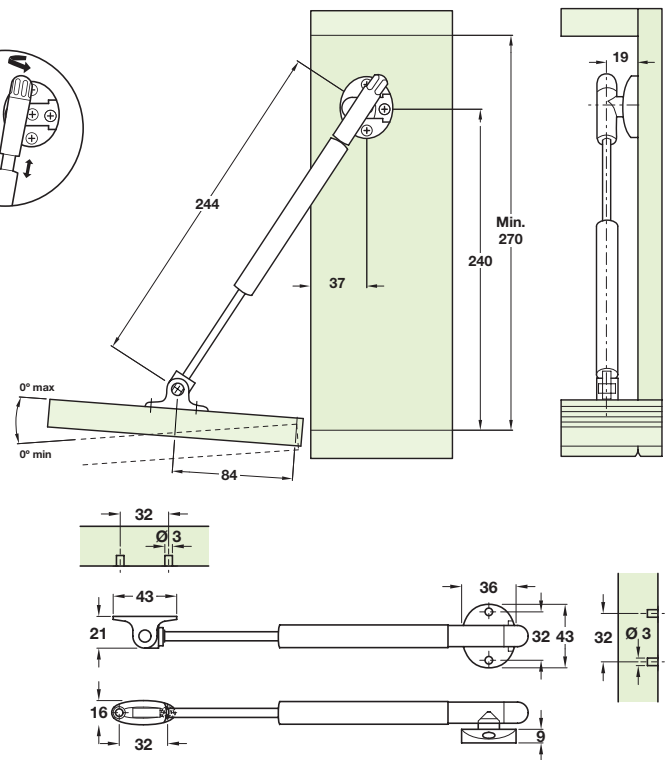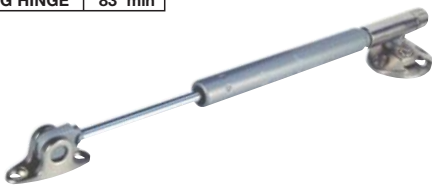

A Automatic opening drop down lid stay, 244 mm


- Special slow down system, once you begin to open the door it continues to open gently and completely by itself
- Alignment:
Align to nearby doors using the rotary knob placed on the piston base plate
To change the opening and closing time of the door adjust the position of the piston base plate within the slot of the side bracket
- Metal supports nickel-plated for quick assembly
- Fixing screws and guide included

The table below refers to chipboard or MDF 18 mm doors and aluminium frame doors with glass 4 mm thick. These are experimental results to be checked by the customer. For a better function and for safety reasons, we suggest using at least 2 stays per piece of furniture (extra-size doors might require 3 or more gas stays). For doors whose weights/dimensions are bigger than those reported on the chart, please increase the number of stays accordingly. Please make sure that gas stays are properly regulated in height through the opposite rotary knob so that the weight of the door is equally distributed amongst the stays used.

	Cat.No.
Drop down lid stay	365.65.700

Door width	1200 mm max	
Door height	Kilos	StaysxN
301-350 mm	<4,9	2x 244 mm

Order qty: 1 set

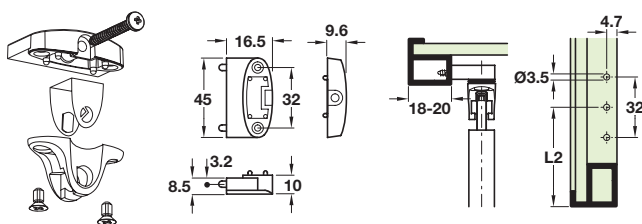

Important:
The door bracket has to be placed in vertical position with the slot facing forwards.
The side bracket has to be placed with the slot in a horizontal position and the open end facing the wall.
The opening and closing of the door can be changed by adjusting the position of the piston base plate within the slot:
- Forwards adjustment = the door opens automatically later and closes automatically in advance.
- Backwards adjustment = the door opens automatically in advance and closes automatically later.

B Adaptor for aluminium frame 18-20 mm wide

- The adaptor suits both flap and drop down automatic doors
- Metal support nickel-plated for quick assembly
- Fixing screws and guide included
- Zinc-plated steel



	Cat.No.
Lid stay adaptor	372.00.790

The dimensions refer to carcasses which use standard sprung hinges and mounting plates 0 mm

L	L1	L2	L3 (min.)	X°
164 mm	161 mm	50 mm	190 mm	103° max 83° min
244 mm	235 mm	84 mm	264 mm	94° max 83° min
355 mm	345 mm	135 mm	374 mm	90° max 83° min

Order qty: 1 pc

TCH-FF 2010, HUK. Dimensional data not binding. We reserve the right to alter specifications without notice.