

# Softclose Installation For Pocket Door Kit


Our PD1 & PD2 kits can accommodate a Softclose device on doors 686mm wide and above Details are shown below.

Please note that the Catch for the Softclose has to be notched into the Timber Header as shown.

Ensure once Catch is fitted that it does not foul the Hanger Plates as they pass.

The plan view below gives dimensions for positioning both Softclose and Catch. These dimensions are calculated when Door is in the closed position and tight against the Door Jamb.

Test once installed and adjust Catch if required. Only when happy should you then line the opening. Ensure any architraves are removable should further adjustment or repair be required in the future.

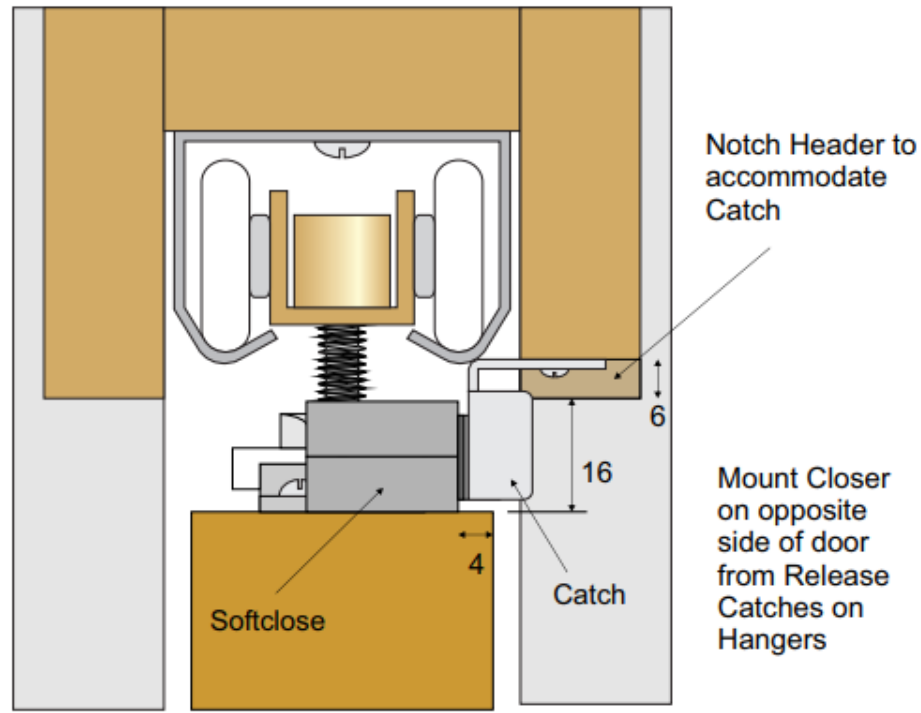

Minimum door size possible is 686mm. If door is between 686mm - 734mm then lose the 25mm spaces between hanger plates and softclose unit and reduce catch distance from jamb to 294mm

## Plan View Showing Top Of Door & Hardware Positioning

